Single-phase ARD Series Elevator Automatic Rescue Device

User Manual

Rev.2.9

ShenYang BlueLight New Generation Technology Co.,Ltd

1 Product Overview

1.1 Model Descriptions

ARD 4 S 15 A1 - G


ARD product *G: with battery*

Cr t Stmdeleltn ~ Power Grid Type Ö1- PH AC220VRD power supply single phase AC220V ¯


2.2 ARD2SXX Application Wirings

2.3 ARD2DXX Applicatf-0.( )57q5433 Tm(T055(c)1879.9 (D2)4o)1(D2)4n8.8 (a W)1.8 (a9 (D2)

2.4 ARD2EXX Application Wirings

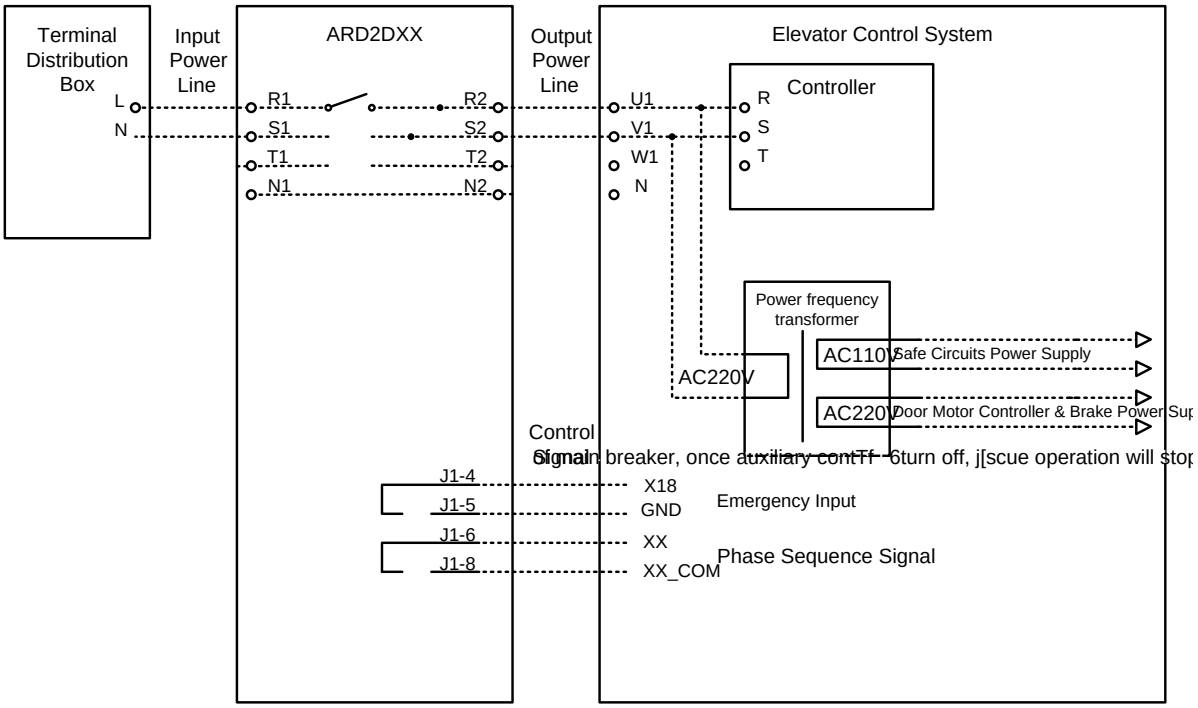

2.5 ARD4SXX-Z Application Wirings

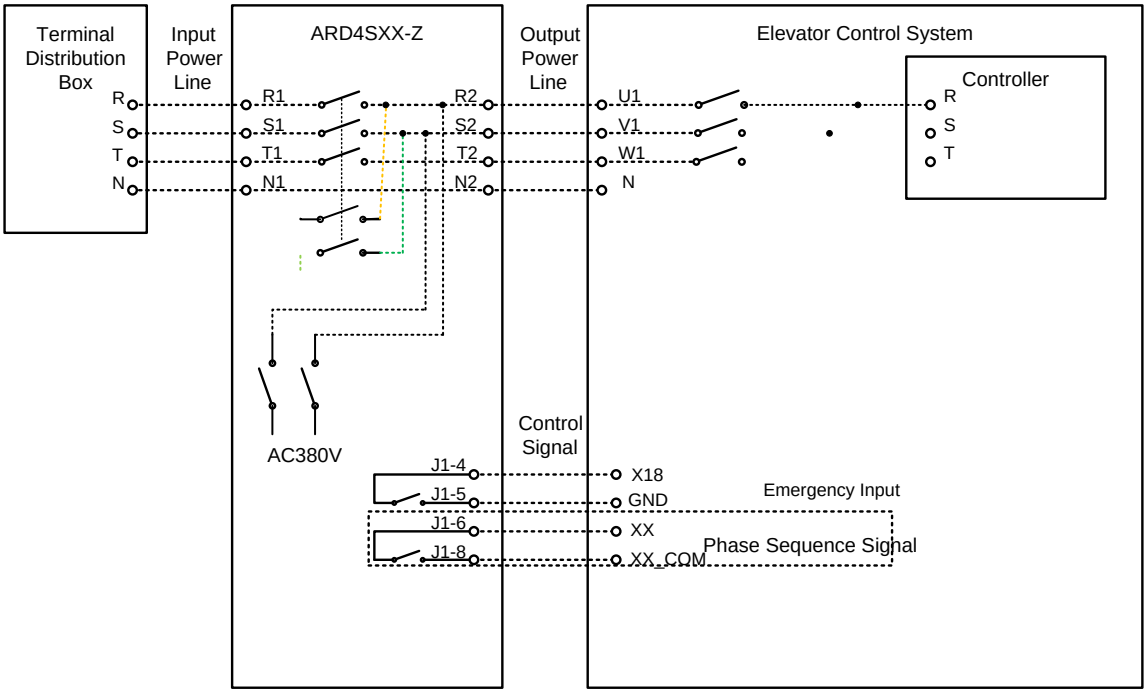

3 Usage Description and Battery Maintenance

3.1 Working principle

3.2 Operation Panel



Figure 3.1 Appearance diagram of operation panel

3.2.1 The definition of LED Indicator Lamps

Table

Table 3.1 The definition and functions of the LED indicator lamps

Name	Function

Table 3.3 ARD fault list (Cont'd)

Fault Code	Descriptions	Reasons and Solutions

3.3 Battery Replacement Guidance

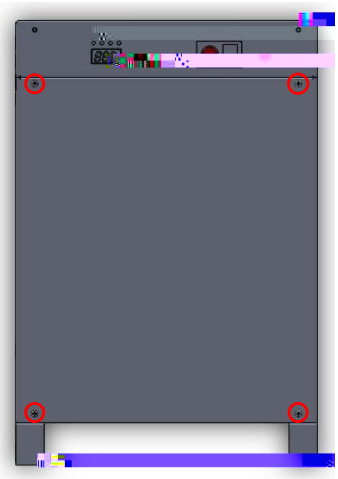


Figure 3.3 Remove Face Plate

Figure 3.4 Battery Connection